














(1) Top  1PCS	(2) modesty Panel  1PCS	(W) Grommet  2PCS	(S2) Flat bracket  4PCS	(A) Dowel  4PCS+1	(B) Cam Pin  3PCS+1	(C) Cam Lock  3PCS+1	(D) Cam Cover  3PCS+1	(E2) Wood screw  4PCS+2	(E4) Wood screw  24PCS+2	(D) Leg leveller  2PCS
---	---	--	--	--	---	---	--	--	---	---


STEP 1




STEP 2

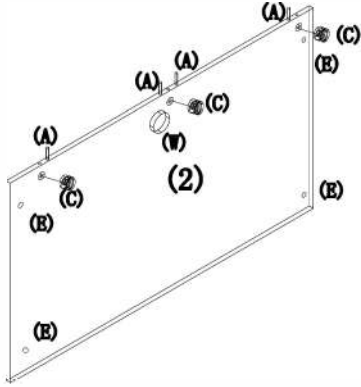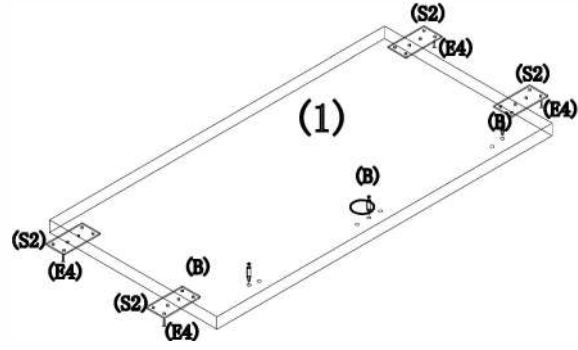

STEP 3

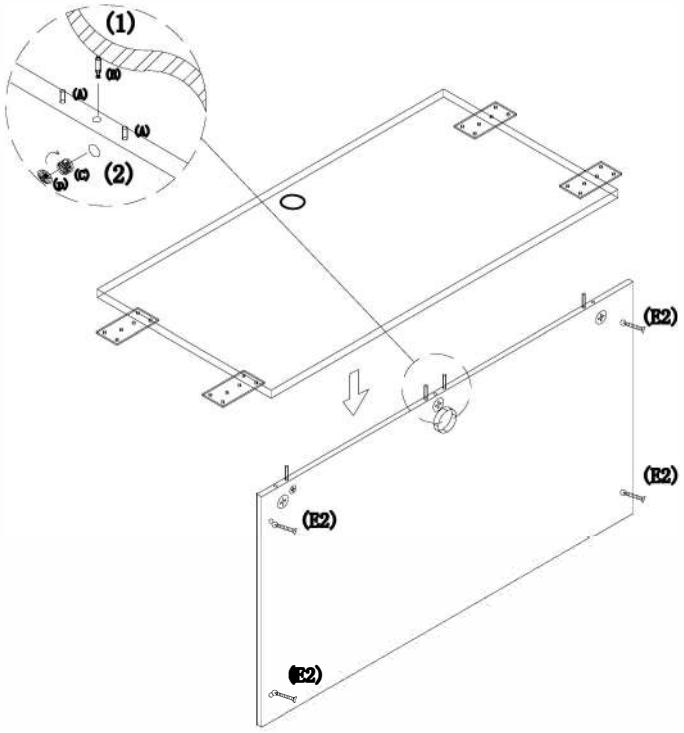

BRIDGE, 48*24
NAP-70
 48"W*24"D*29"H



Always lay components on A clean, soft-cushioned surface during assembly.